

## **Atlas Air A5000**

**Kit Number:  
AA57365**

**Fits:  
Dodge/RAM 1500**

*Engineered and Assembled in the USA*

---

**Installation Instructions**




## **Before Getting Started**

For optimal performance and safety, read all instructions thoroughly before beginning the installation. Failure to read and follow these instructions may lead to improper installation and potential safety risks.

## **Tools Needed**

- Standard and metric open-end or box wrenches
- Ratchet
- Standard and metric, regular and deep-well sockets
- 1/4" and 5/16" drill bit (very sharp)
- Heavy-duty drill
- Torque wrench
- Adjustable wrench
- 1" Centering punch
- 4" Grinder or metal cutting tool
- Standard and metric hex-key wrenches
- Hose cutter, razor blade, or sharp knife
- Hoist or floor jacks
- Safety stands
- Safety glasses
- Black paint or undercoating
- Air compressor or compressed air source
- Spray bottle w/ dish soap/water solution

# **AA57365 Exploded Installation View**

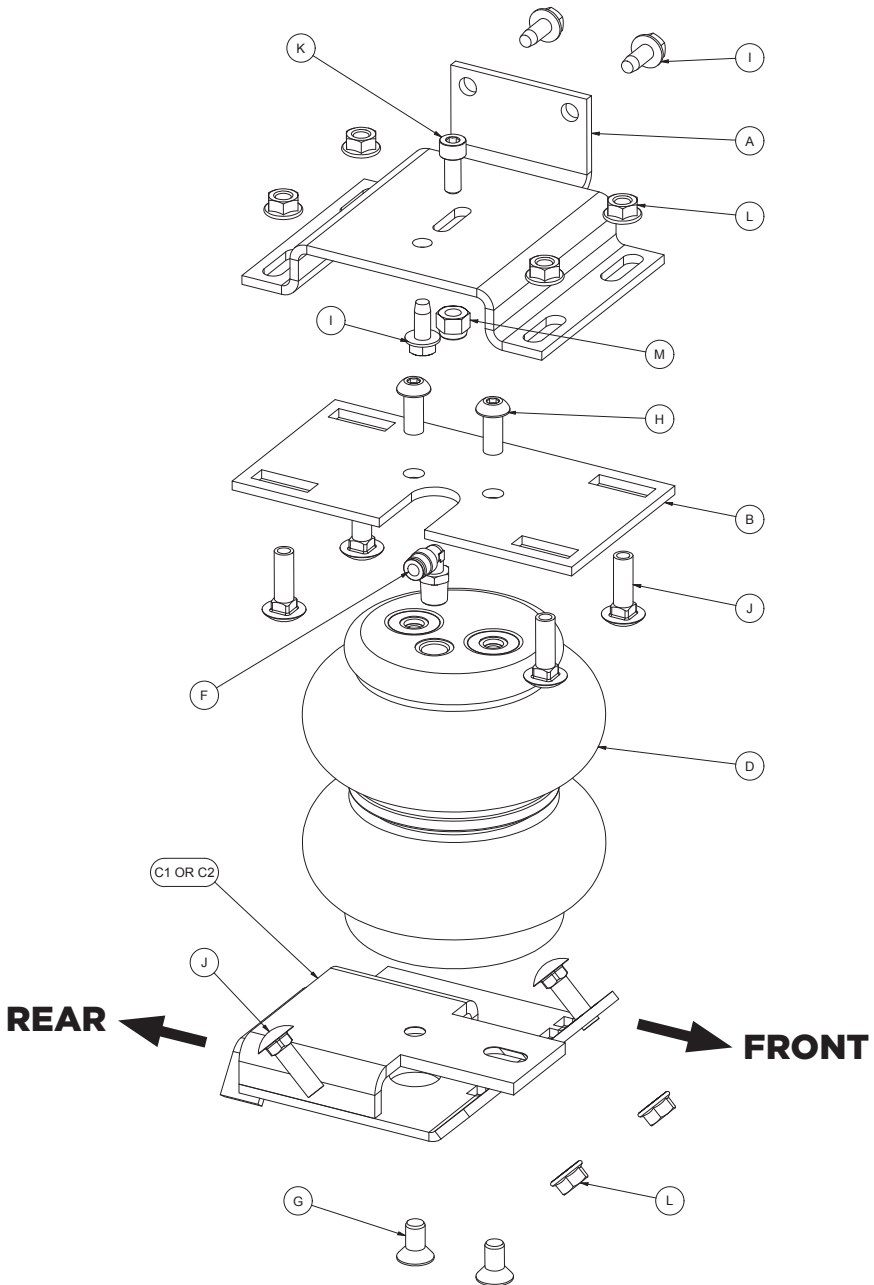

# Parts List

Part	Part No.	Part Description	QTY
<b>A</b>	07641	Frame bracket	2
<b>B</b>	11444	Air spring bracket	2
<b>C1</b>	03079	LH Lower bracket	1
<b>C2</b>	03078	RH Lower bracket	1
<b>D</b>	58403	Air spring	2
<b>F</b>		Push-to-connect (PTC) fitting	2
<b>G</b>		3/8"-16 x 3/4" Flat-head screw	4
<b>H</b>		3/8"-16 x 3/4" Button-head cap screw	4
<b>I</b>		5/16"-18 x 3/4" Self-tapping screw	6
<b>J</b>		3/8"-16 x 1 1/4" Carriage bolt	12
<b>K</b>		M8-1.25 x 20mm Socket-head screw	2
<b>L</b>		3/8"-16 Serrated lock nut	12
<b>M</b>		M8-1.25 Nylon lock nut	2
<b>AA*</b>		Air line assembly	1
<b>BB*</b>		Zip ties	6
<b>CC*</b>		Valve cap	2
<b>DD*</b>		Star washer	2
<b>EE*</b>		Rubber washer	2
<b>FF*</b>		M8 Flat washer	2
<b>GG*</b>		5/16" Hex nut	4
<b>HH*</b>		Thermal Sleeve	1
<b>II*</b>		Heat Shield	1

\* These parts are not shown in the Exploded Installation View section

# Introduction

This guide is here to walk you through setting up and taking care of your Atlas Air™ A5000 air suspension kit. They are built tough—commercial-grade and reinforced for durability. Think of the air springs like tires: layers of rubber and strong cords work together to manage pressure and maintain shape to help control your ride.

With Atlas Air A5000, you'll get up to 5000 pounds (2268 kg) of support to keep your ride level, and you can fine-tune the pressure anywhere between 5 and 100 PSI (0.34 to 7 BAR). Before diving into the installation or doing any kind of upkeep, make sure to read through the entire manual—it'll save you time and headaches down the road.

## Symbols



THIS MEANS THERE'S AN IMMEDIATE AND SERIOUS RISK. IF IGNORED, IT WILL LEAD TO SEVERE INJURY OR EVEN DEATH. ALWAYS TAKE THESE WARNINGS SERIOUSLY.



SIGNALS A DANGEROUS SITUATION OR UNSAFE ACTION THAT COULD CAUSE SEVERE INJURY OR DEATH. IT'S NOT A GUARANTEE, BUT IT'S A BIG RISK—PROCEED CAREFULLY.



*These callouts highlight useful advice or important reminders to keep you on track during the process. Don't skip them—they often save time.*



*Little tricks of the trade to help installation go more smoothly. These tips can make a big difference if you're aiming for a clean, efficient job.*

## Information

This kit does not increase the Gross Vehicle Weight Rating (GVWR) or payload capacity of your vehicle. Always refer to your vehicle's Safety Compliance Certification Label or owner's manual, and do not exceed the manufacturer's maximum load rating.

- **Gross Vehicle Weight Rating (GVWR):**

The maximum allowable weight of a fully loaded vehicle, including passengers, cargo, and fluids. This value—along with other important specifications like tire size, rim size, and inflation pressure—is located on the vehicle's Safety Compliance Certification Label.

- **Payload:**

The maximum combined weight of passengers and cargo your vehicle is designed to carry. Payload is calculated by subtracting the vehicle's base curb weight from its GVWR.

## Air Pressure Guidelines

While Atlas Air A5000 air springs are engineered to handle a **maximum inflation pressure of 100 PSI (7.0 BAR)**, the actual pressure required will vary based on the vehicle's load and total weight. Always adjust air pressure according to your specific load conditions—**not solely based on the maximum pressure limit.**

## Ride Height and Suspension Limits

Always maintain the correct ride height by adjusting the air pressure based on your current load. Shock absorbers typically act as the suspension limiters on extension. If they do not, particularly on off-road vehicles, consider using limiting straps to prevent overextension.

## Brake System Considerations

Vehicles equipped with a **rear brake proportioning valve** may experience changes in braking performance when using a load-assist product. **Consult your dealer** before installation. If your vehicle **does not** have a proportioning valve or is equipped with an **anti-lock brake system (ABS)**, the installation of an air spring kit **will not affect braking performance.**

# System Install

## Build Air Springs

### 1. Install Swivel Fitting

Thread the swivel fitting (F) into the top port of the air spring (D). Tighten it finger-tight, then turn an additional 1 1/2 rotations to ensure a secure seal.

### 2. Attach Upper Bracket

Secure the upper bracket (B) using two 3/8" button-head cap screws (H). Torque the fasteners to no more than 20 lb.-ft. (27Nm). Repeat the process for the second air spring.

### 3. Set Fitting Orientation

Orient the air spring assemblies so the swivel fittings face outward, away from each other.



*The completed air spring assemblies will be left- and right-hand specific. When installed on the vehicle, the swivel fittings should face outward, toward the tire.*

### 4. Attach Lower Brackets

Attach the left lower bracket (C1) to the left air spring assembly using two 3/8" flat-head screws (G). Repeat the process for the right air spring using the right-side bracket (C2). Torque all hardware to no more than 20 lb.-ft. (27Nm). When installed, the hooks of the lower bracket should face the rear of the vehicle.

## Vehicle Preinstall Steps

### 1. Raise and Support the Vehicle

Lift the vehicle and securely support the frame using safety stands. Leave enough clearance to lower the axle and remove the coil springs. Remove the rear wheels.

### 2. Mark the Coil Springs

Mark the bottom of the left and right coil springs and their spring seat mounts with chalk or a paint marker. This helps ensure the springs are reinstalled in the same orientation.

### 3. Remove Lower Shock Bolts and Springs

Remove both lower shock bolts and slowly lower the axle until the coil springs can be removed.



*Lower the axle carefully to avoid stressing the flexible brake lines.*

**4. Remove the Jounce Bumpers**

Remove the jounce bumpers from both sides of the vehicle.

**5. Detach Jounce Bumper Brackets**

Grind off the welds attaching the jounce bumper cups to the frame bracket. Save the jounce bumper cups for future use.

**6. Clean and Protect the Frame Surface**

Grind any remaining welds flush with the frame. Apply paint or undercoating to protect the bare metal.

**7. Prepare Frame Bracket for Alignment**

Install the M8 socket head bolt (K) into the slot closest to the flange on the upper frame bracket (A). Cap it with a nylon lock nut (M) and tighten just enough so the bolt can slide freely.



*The bolt head should face the same direction as the flange and is used only as an alignment guide.*

**8. Position the Frame Bracket**

Set the bracket (with the bolt installed) onto the frame. Insert the alignment bolt through the hole previously used by the stock jounce bumper.

**9. Ensure Flush Fit**

Confirm the bracket sits flush against the bottom of the frame. If not, remove any leftover welds.

**10. Mark and Center Punch for Drilling**

Press the bracket's flange against the frame and mark the frame with a paint marker through the open hole in the lower bracket. Use a 1/4" centering punch.

**11. Drill Pilot Hole and Form Threads**

Drill a 1/4" hole in the marked location. Install a 5/16" self-tapping screw (I) to form threads, then remove the screw.

**12. Install the Bracket with First Screw**

Reposition the bracket and install the self-tapping screw. Ensure the washer head sits flush against the bracket. Torque to 15 lb.-ft. (20Nm).

**13. Drill Side Holes**

Ensure the frame bracket (A) is flush. Using the flange holes as a guide, center punch and drill two 1/4" holes through the side of the frame.

**14. Install Side Screws**

Install two self-tapping screws (I) in the side holes. Ensure the heads are flush and torque each to 15 lb.-ft. (20Nm). Repeat the installation on the opposite side.

**15. Reinstall Coil Springs**

Place the coil springs back into position using your index marks. Raise the axle until the springs seat correctly in the top and bottom spring perches.

**16. Reinstall Wheels**

Reinstall the rear wheels and lower the vehicle until the wheels support the weight. Torque the lug nuts to the manufacturer's specification.

**17. Reinstall Lower Shock Bolts**

Reinstall the lower shock bolts and torque them to 100 lb.-ft. (135Nm).

**Air Spring Installation into Vehicle****1. Install First Carriage Bolt (Driver's Side)**

Index a 3/8" carriage bolt (J) into the opening on the front of the driver's side assembly.

**2. Lower Axle for Assembly Clearance**

Drop the axle to gain sufficient clearance to position both air spring assemblies onto the axle.

**3. Position Driver's Side Assembly**

Place the driver's side assembly onto the axle with carriage bolts (J) in each corner slot. Ensure the back of the bracket is hooked below the jounce bumper strike plate. Push the assembly forward while aligning the carriage bolt with the existing hole in the front of the strike plate. Install a 3/8" serrated lock nut (L) but leave it loose.

**4. Install Second Carriage Bolt (Driver's Side)**

Insert a second 3/8" carriage bolt (J) through the remaining hole on the front side of the bracket.

**5. Thread the Nut on Front Carriage Bolt**

Use a socket and extension to reach the inside threads of the previously set carriage bolt to install a 3/8" serrated lock nut (L). It may help to slightly pull the bolt outward to angle it enough to start threading. Use the slot in the lower control arm mount for tool access while tightening the nut.

**6. Install Passenger's Side Assembly**

Repeat the process on the passenger side. Index the lower bracket tabs under the jounce bumper strike plate. Install the carriage bolts similarly, using the appropriate slot in the lower bracket. Torque all lower bracket hardware evenly to 31 lb.-ft. (42Nm), ensuring the tabs remain correctly positioned under the strike plate. Fittings should face outward toward the tires.

**7. Raise Axle and Align Upper Mounts**

Raise the axle while aligning the air spring mounting plate with the upper frame bracket. Install 3/8" carriage bolts (J) into each corner of each upper bracket (4 per bracket). Install 3/8" serrated lock nuts (L) onto each carriage bolt, tightening finger-tight to allow for final alignment.

**8. Align Air Springs**

Adjust each air spring until it is as close to vertical as possible. Once aligned, torque all four flange nuts to 31 lb.-ft. (42Nm).

**9. Final Torque Check**

Torque all remaining installed nuts to 31 lb.-ft. (42Nm) to ensure everything is securely fastened.

**10. Verify Installation**

Visually inspect the completed assembly. Ensure fittings face outward and brackets are properly seated and torqued. The driver's side should now appear securely mounted to the frame bracket.

## **Air Lines Installation**

### **1. Select Schrader Valve Locations**

Choose suitable locations for the Schrader valves. If necessary, drill a 5/16" (8 mm) hole at each selected location. Common locations for mounting are inside fuel tank filler door, inside rear wheel wells, or by the license plate mount or rear bumper area.

### **2. Measure and Cut the Air Line**

Measure the length of air line needed to reach your intended Schrader valve locations. Cut the air line (AA) using a sharp razor blade or hose cutter to make clean, square cuts. Do not use scissors or wire cutters, as these can deform the tubing and compromise the seal.

### **3. Route and Secure the Air Line**

Route the air line (AA) from each air spring to the chosen Schrader valve locations. Plan the route to avoid sharp edges, moving parts, and heat sources. Once routed, use zip ties (BB) to secure the air line to stable points along the vehicle chassis. Do not pinch or kink the line. Leave at least 2" (51 mm) of slack to accommodate movement. The air line's minimum bend radius is 1" (25 mm).



*Maintain a minimum of 5 1/2" (140 mm) clearance between all air lines and any part of the exhaust system. Avoid routing air lines over sharp edges or making tight bends.*

### **4. Install Schrader Valves**

Install the Schrader valves into the selected locations.

## **Heat Shield Installation (if provided in kit)**

### **1. Position the Heat Shield**

Place the heat shield over the exhaust pipe near the air spring. Maintain at least 1/2" (13 mm) of clearance between the shield and the exhaust surface. Depending on the design of the heat shield included in your kit, you may need to bend the tabs or the shield itself to achieve proper fitment and spacing.

### **2. Install the Air Line Thermal Sleeve (if included)**

If your kit includes a thermal sleeve, slide it over the section of air line that runs closest to the exhaust. This sleeve helps protect the line from excessive heat exposure.

### **3. Secure Components with Hose Clamps**

Use hose clamps to secure the heat shield and thermal sleeve (if used). Apply double clamps where needed for added security. Make final adjustments to ensure all components are properly spaced and firmly in place.

## Checklist

Ensure the air suspension system is correctly installed and safe for operation by completing the following checks:

### 1. Clearance Verification

Inflate the air springs to 50 PSI (3.45 BAR). Confirm a minimum clearance of 1/2" (13 mm) between the air springs and any adjacent components, including tires, brake assemblies, the vehicle frame, shock absorbers, and brake lines. Adjust as needed to prevent contact during operation.

### 2. Heat Clearance Check

Verify that all air springs and air lines are positioned at least 5 1/2" (140 mm) away from any heat sources.

### 3. Leak Inspection

With the system pressurized to 50 PSI (3.45 BAR) inspect all fittings, air lines, and connections for leaks. All leaks must be fully resolved prior to road testing.

### 4. Road Test Procedure

Inflate the air springs to the recommended operating pressure and conduct a 10-mile (16 km) road test. Upon completion, re-inspect for adequate clearance, air leaks, and secure fasteners.

### 5. Torque Confirmation

After 500 miles (800 km) of driving, recheck and torque all hardware to the specified values to ensure long-term stability and safety.

## Adjusting Air Pressure

### *Stability*

Properly adjusting air pressure is key to achieving both vehicle stability and correct ride height. Begin by increasing pressure until the suspension feels firm and controlled—without exceeding the maximum of 100 PSI (7 BAR). Ensure the vehicle sits level across all four corners. Uneven loads may require redistributing cargo or adjusting air pressure side to side.

### *Comfort*

Ride quality is also influenced by air pressure. Too much or too little can cause harshness or instability. As a general rule:

- If the vehicle frequently bottoms out on the frame, increase air pressure.
- If the ride feels overly stiff or harsh, reduce air pressure slightly.

Adjust gradually to find the best balance between comfort and control.

## **Guidelines**

### **1. Check System Pressure Weekly**

Inspect the air pressure in the system at least once a week to ensure consistent performance and ride quality.

### **2. Maintain Proper Ride Height**

Always operate the vehicle at the recommended ride height. Do not exceed 100 PSI (7.0 BAR) under any circumstances.

### **3. Inspect for Air Leaks as Needed**

If you suspect a leak, follow these steps to identify and address the issue:

- a. Inflate the air springs to 50 PSI (3.45 BAR).
- b. Spray all air line connections and the inflation valve with a mild solution of liquid dish soap and water.
- c. Wait 30 seconds and observe for any bubbles, which indicate a leak.
- d. Recheck the system pressure after 24 hours. A pressure loss of 2–4 PSI (0.14–0.28 BAR) is normal after initial installation. If the pressure drops by more than 5 PSI (0.34 BAR), recheck for leaks.
- e. Once testing is complete, adjust the air spring to the minimum pressure required for proper ride height.

### **4. Inspect Hardware and Component Alignment**

Periodically check that all fasteners are properly torqued. Also, check for signs of rubbing or misalignment, and realign components as needed.

### **5. Clean the Air Springs**

Occasionally, spray the air springs with clean water to remove mud, dirt, or debris that may collect during use.

### **6. Lift the Vehicle with Care**

If lifting the vehicle by the frame, reduce system pressure to 5 PSI (0.34 BAR) to relieve tension on the air springs and mounting hardware.

# Repair Guide

## ***Fixing Leaks on Barbed Fittings***

1. Cut the air line 1 1/2" (38 mm) behind the existing fitting.
2. Use pliers or locking pliers to twist and pull the air line off the fitting.

**REMEMBER...**

*Do not cut lengthwise, as this may damage the barbs and lead to future leaks.*

3. Reinstall the air line and clamp (if applicable), making sure the air line fully covers all barbs for a proper seal.

## ***Fixing Leaks on Push-to-Connect (PTC) Fittings***

### **To Disconnect:**

1. Release all air pressure from the system.
2. Push the air line inward toward the fitting.
3. While holding the air line in, press the collar inward toward the fitting.
4. With the collar depressed, pull the air line out.

### **Before Reconnecting:**

5. Cut off the end of the air line just beyond the witness mark to ensure a clean, undamaged sealing surface.
6. If the fitting leaks at the threads, remove it, apply fresh thread sealant, and reinstall it 1 1/2 turns beyond finger-tight.

### **To Reconnect:**

7. Push the air line into the fitting until fully seated.
8. Gently pull back on the air line to verify a secure connection.

# **Warranty**

## **What this warranty covers**

Atlas Products Company provides a warranty to the original purchaser of its Load Support Products, for the periods of time listed at [AtlasProducts.com](http://AtlasProducts.com), by product line, from the date of original purchase, that the products will be free from defects in workmanship and materials when used on cars and trucks as specified by Atlas Products Company and under normal operating conditions, subject to the requirements and exclusions set forth below.

## **What this warranty does not cover**

The warranty does not apply to products that have been improperly applied, improperly installed, or that have not been maintained in accordance with the installation instructions furnished with all products. This warranty does not apply and is void if damage or failure is caused by: accident, abuse, misuse (including but not limited to racing or off-road activities or commercial use), abnormal use, faulty installation, liquid contact, fire, earthquake or other external cause; operating the product outside Atlas Products Company's instructions, specifications or guidelines; or service, alteration, maintenance or repairs performed by anyone other than Atlas Products Company to the product from its purchased condition. This warranty also does not apply to: consumable parts, such as batteries, cosmetic damage, including but not limited to scratches or dents; defects caused by normal wear and tear or otherwise due to the normal aging of the product, or if any serial or identification number has been removed or defaced from the product. Atlas Products Company reserves the right to change the design of any product without assuming any obligation to modify any product previously manufactured.

## **Limitation of liability**

To the extent permitted by law, this warranty and the remedies set forth herein are exclusive and in lieu of all other warranties, remedies and conditions, whether oral, written, statutory, express or implied. ATLUS PRODUCTS COMPANY DISCLAIMS ALL STATUTORY AND IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS TO THE EXTENT PERMITTED BY LAW. To the extent such warranties cannot be disclaimed, such implied warranties shall apply only for the warranty period specified above. Please note that some states do not allow limitation on how long an implied warranty (or condition) lasts. So the above limitation may not apply to you.

Except as provided in this warranty and to the extent permitted by law, Atlas Products Company shall not be liable for any direct, special, incidental or consequential damages resulting from any breach of warranty or condition, or arising in connection with the sale, use or repair of Atlas products, or under any other legal theory, including but not limited to loss of use, loss of revenue, loss of actual or anticipated profits, loss of the use of money, loss of business, loss of opportunity, loss of goodwill, and loss of reputation. Atlas Products Company's maximum liability shall not in any case exceed the purchase price paid by you for the Atlas product. Please note that some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

## How to get service

If a defect in workmanship or materials causes your Atlas product to become inoperable within the warranty period, before returning any defective product, email Atlas Products Company at [support@atlusproducts.com](mailto:support@atlusproducts.com). The consumer shall be responsible for removing the defective product from the vehicle (including any labor charges) and returning it, shipping costs prepaid, to Atlas Products Company for verification. You must prove to the satisfaction of Atlas Products Company the date of original purchase of your Atlas product. A minimum \$10 shipping and handling charge (plus applicable sales tax) will apply to all warranty claims. You must also pack the product to minimize the risk of it being damaged in transit. If we receive a product in damaged condition as the result of shipping, we will notify you and you must seek a claim with the shipper.

## What Atlas Products Company will do

If you submit a valid claim to Atlas Products Company during the warranty period, and Atlas determines that the product was defective, Atlas Products Company will, at its option, repair your Atlas product or furnish you with a new or rebuilt product. Atlas Products Company will not reimburse you for repairs or replacement parts provided by other parties. Your repaired or replacement Atlas product will be returned to you (subject to payment of the required warranty claim shipping and handling charge), and it will be covered under the warranty for the balance of the warranty period, if any. When a product or part is replaced, any replacement item becomes your property and the replaced item becomes the property of Atlas Products Company. You are responsible for the installation/reinstallation (including any labor charges) of the product.

## How the law relates to this warranty

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. By this warranty, Atlas Products Company does not limit or exclude your rights except as allowed by law. To fully understand your rights, you should consult the laws of your state.

## Customer Support

For Customer Service support, please contact us at:  
[support@atlusproducts.com](mailto:support@atlusproducts.com)

Atlas Products Company reserves the right to make changes and improvements to its products and publications at any time.





*Engineered and Assembled in the USA*

---

Document No. AM-1217  
Revision (022510)  
ECR 10488

California:  WARNING: Cancer and Reproductive Harm - [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)